



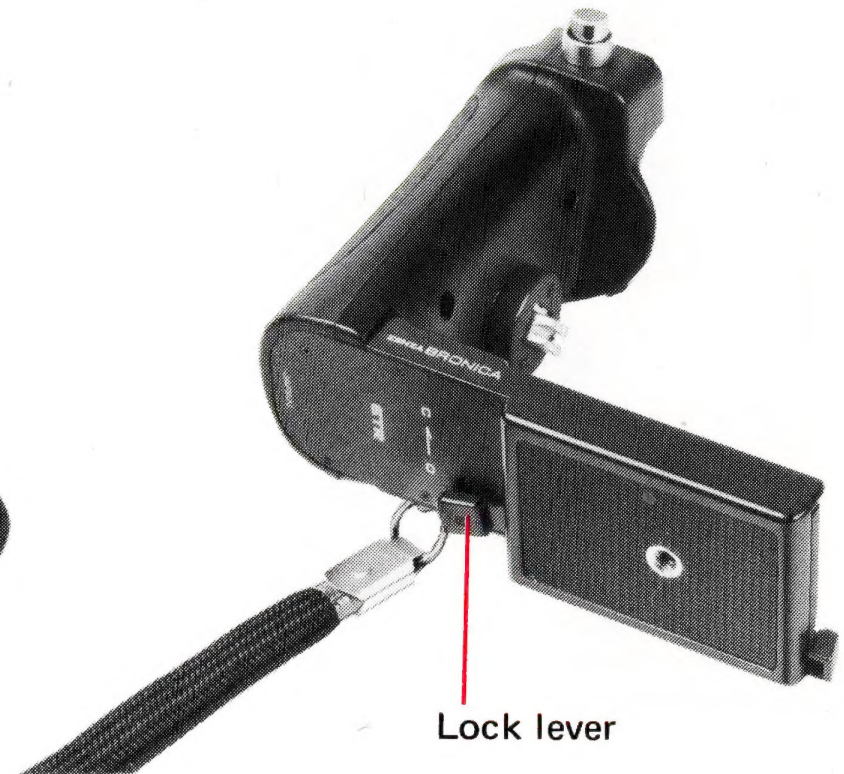


SPEED GRIP-E

INSTRUCTIONS ②

Parts

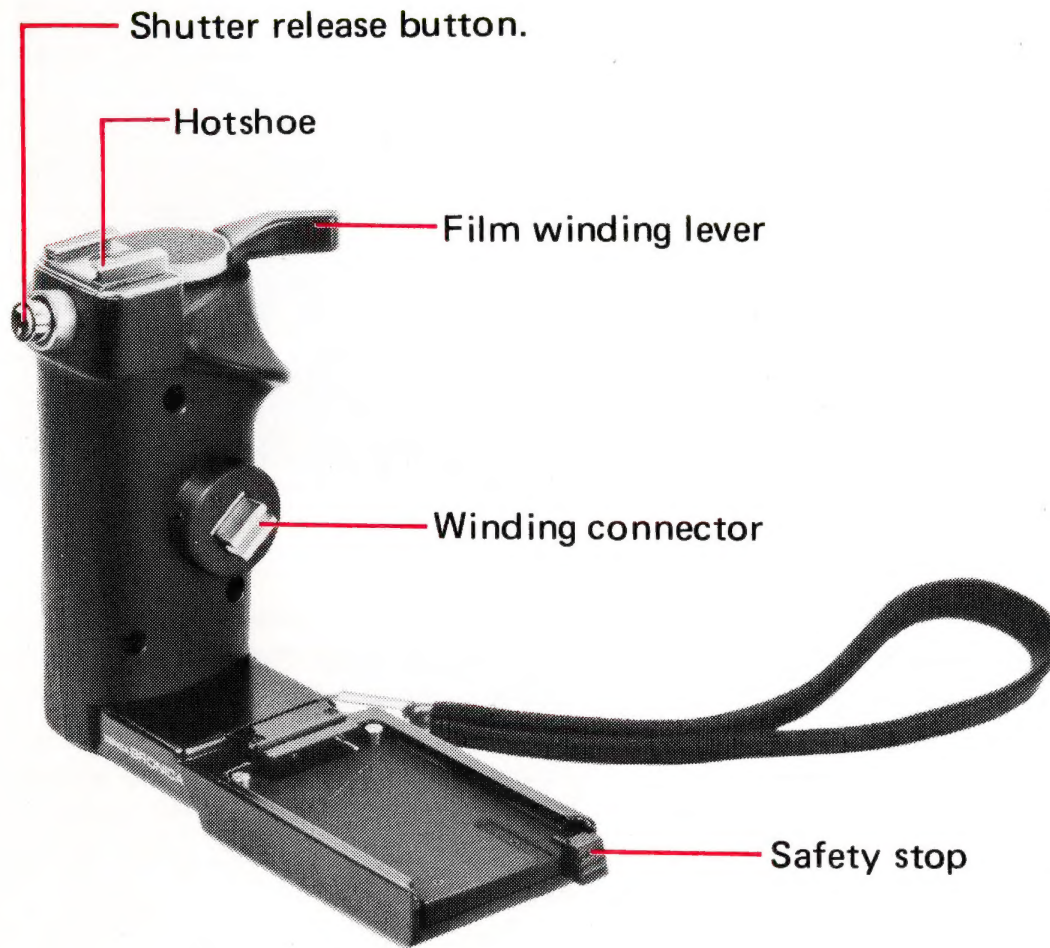


1. Attaching the Speed Grip E

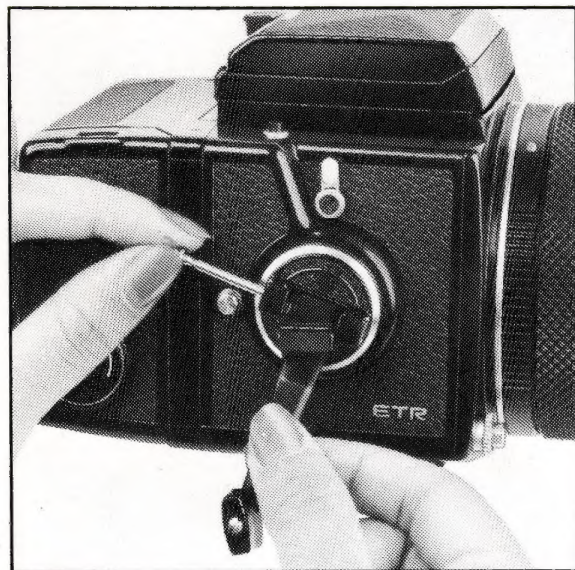

1) Pull out the film winding crank's attachment rod, while holding the film winding lever with the other hand. Then pull off the lever. Finally, slip the attachment rod back into position.




2) Push the open grooved section of the Speed-Grip E onto the tripod mounting shoe on the base of the camera body, after carefully aligning the two. Insert the accessory only about halfway.

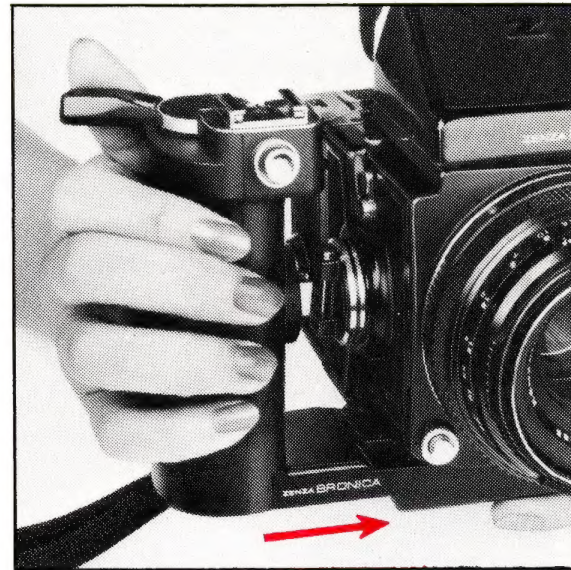

3) Stroke the film winding lever slightly so that the winding connector on the Speed-Grip E is in position to mesh with the attachment rod of the film winding crank. When aligned properly, push the Speed-Grip E in fully.

2. Operations

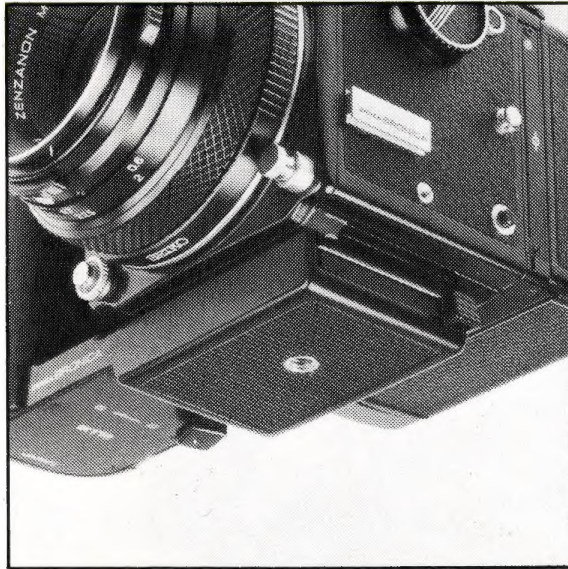

4) When pushed in to its limit, the safety stop on the end of the accessory's base will spring up and lock the accessory.



5) Finally, slide the lock lever on the base of the accessory in the direction indicated by the arrow.


IMPORTANT

The Speed-Grip E must be mounted securely with the lock lever for proper connections.



1) Stroke the film winding lever fully twice which will advance the film and cock the shutter.
2) Press the shutter release button on the Speed-Grip E or on the camera body to release the lens shutter.


3. Detaching the Speed-Grip E

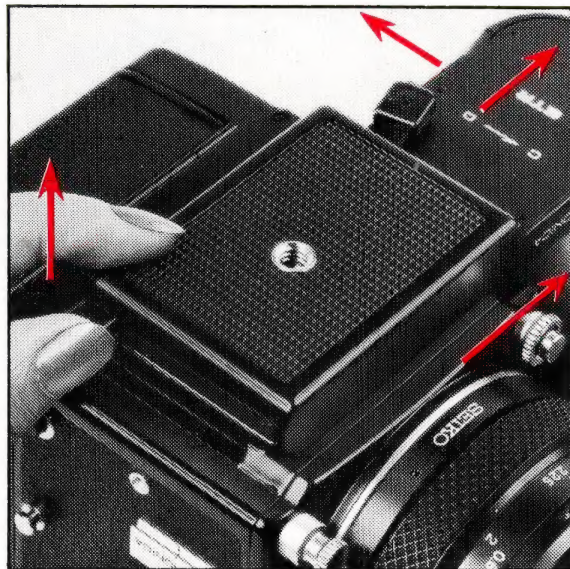

1) Unlock the lock lever by sliding it in the direction opposite to that indicated by the arrow.

Next, depress the safety stop and, at the same time, pull the accessory away from the camera body. Finally, replace the film winding lever.

4. Hot Shoe

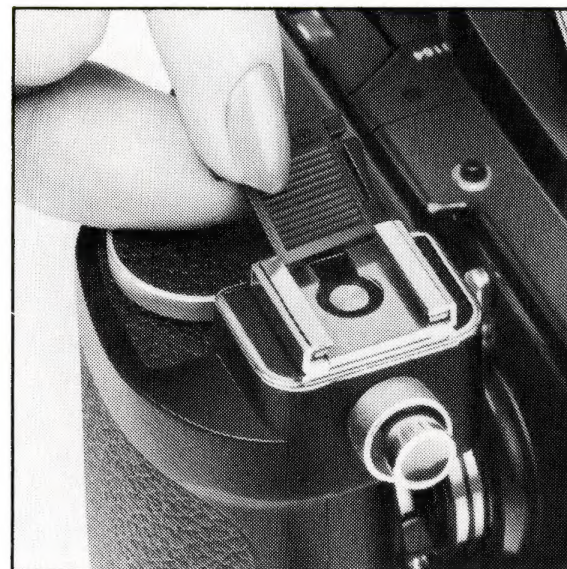

1) Use the hot shoe on the accessory for attaching a cordless electronic flash unit.

2) Insert the black hot shoe cover when a flash unit is not being used, to protect the user against accidental shocks.

The Speed-Grip E is a very important and valuable accessory for the Zenza Bronica ETR because it gives the camera shooting speed and handling ease comparable to smaller 35 mm single lens reflexes when shooting in both horizontal and vertical formats.

Features

- Thumb-stroked film winding lever for fast, simple film winding and shutter cocking actions.
- Built-in shutter release for fast shooting action.
- Well-balanced for shooting in both horizontal and vertical formats.
- Hot shoe for cordless electronic flash unit.
- Hot shoe and shutter release are automatically connected upon attachment.



BRONICA CO.,LTD.

662 Bijogi, Toda-shi, Saitama Prefecture 335, Japan

Telephone: (0484) 22-0003

Cable Address: "BRONICA WARABI"

Telex Call No. 02962733 BRONC J

Fax: (0484) 21-2413